



**PHILIPS**


Super automatic  
espresso machine




















5000 series













EP5360, EP5361, EP5365

EN USER MANUAL  
繁體中文 使用手冊




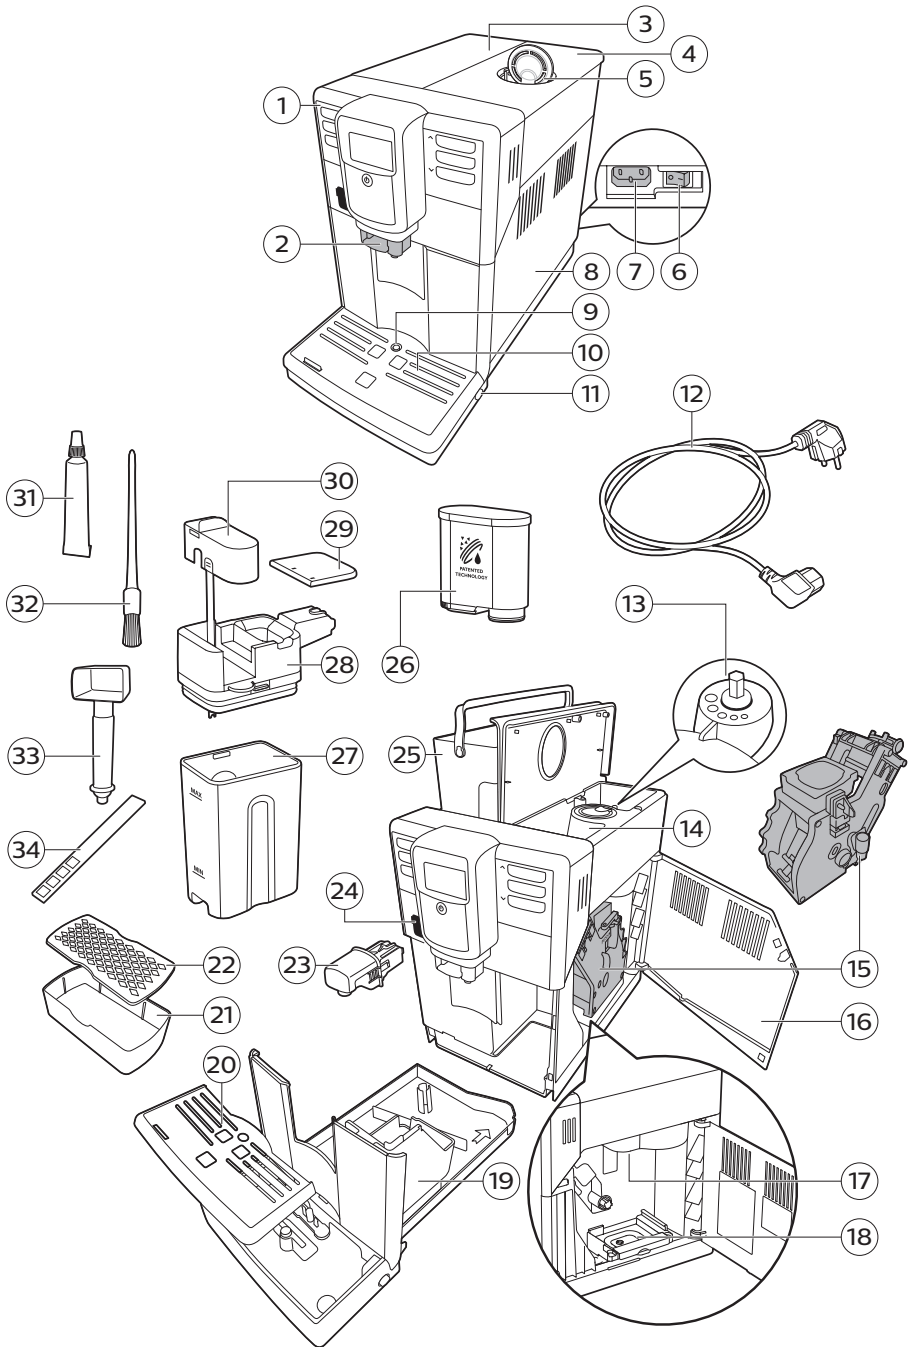

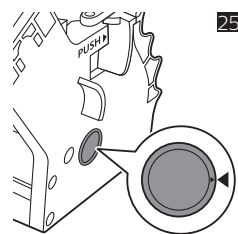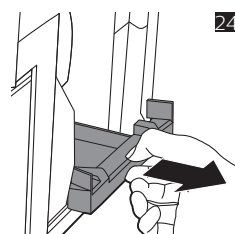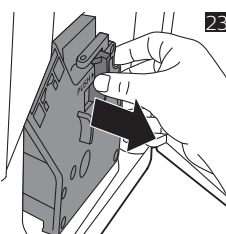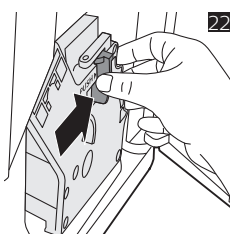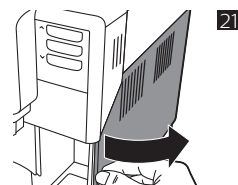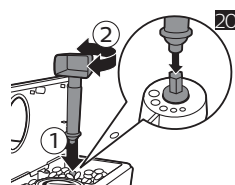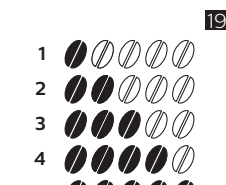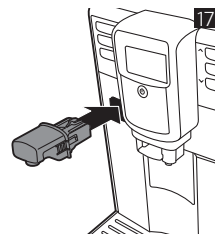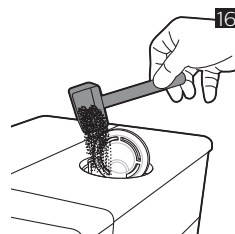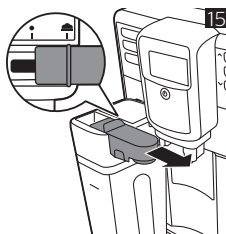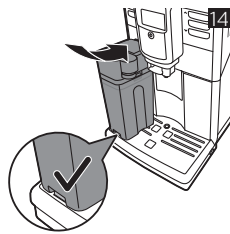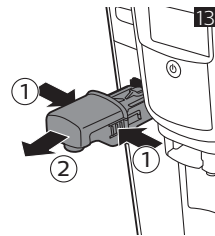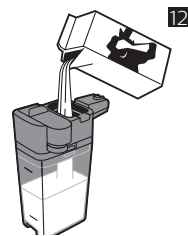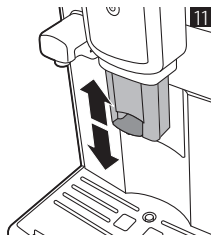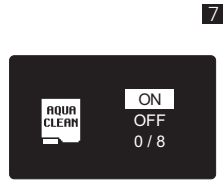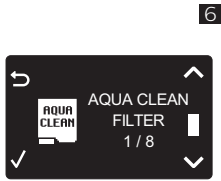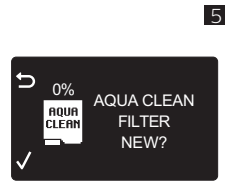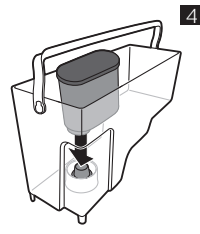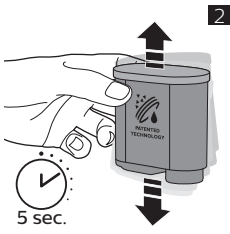

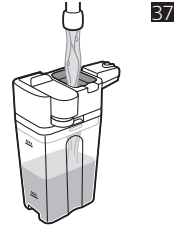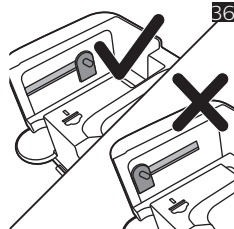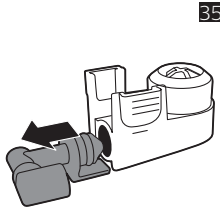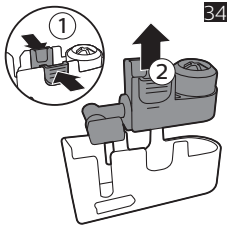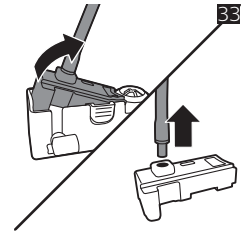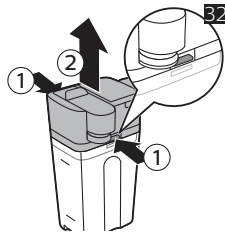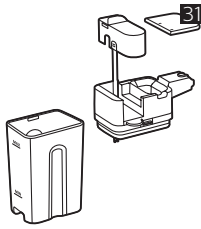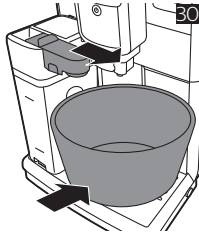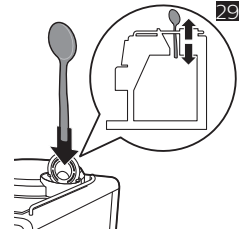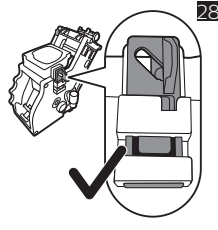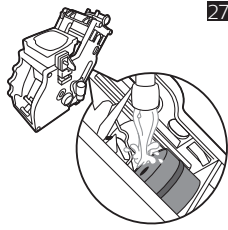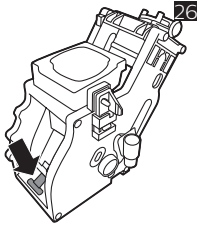

38

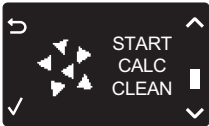

39




40



41



42

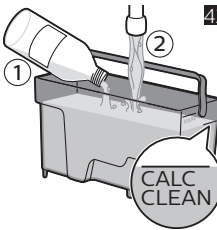



**English 8**  
繁體中文 **29**

# Contents

IMPORTANT SAFEGUARDS	8
Important safety information	9
Warning	9
Caution	10
Machine overview (Fig. 1)	11
Introduction	12
First installation	12
AquaClean filter	12
Measuring water hardness	14
Using the control panel	14
Brewing drinks	14
Personalizing drinks	16
Adjusting grinder settings	16
Handling the brew group	17
Cleaning and maintenance	17
Cleaning the milk carafe	19
Descaling procedure	21
Warning icons and error codes	22
Ordering accessories	23
Troubleshooting	24
Recycling	27
Warranty and support	27
Technical specifications	27

## IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- 1 Read all instructions.
- 2 Do not touch hot surfaces. Use handles or knobs.
- 3 To protect against fire, electric shock and injury to persons do not immerse cord, plugs, or appliance in water or other liquid.
- 4 Close supervision is necessary when the appliance is used by or near children.
- 5 Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- 6 Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
- 7 The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock or injury to persons.
- 8 Do not use outdoors.
- 9 Do not let cord hang over edge of table or counter, or touch hot surfaces.
- 10 Do not place on or near a hot gas or electric burner, or in a heated oven.



- 11** Always attach plug to appliance first, then plug cord into wall outlet. To disconnect, turn any control to “off”, then remove plug from wall outlet.
- 12** Do not use appliance for other than intended use.
- 13** Save these instructions.

This appliance is for household use only. Any servicing, other than cleaning and user maintenance, should be performed by an authorized service center. Do not immerse machine in water. To reduce the risk of fire or electric shock, do not disassemble the machine. There are no parts inside the machine serviceable by the user. Repair should be done by authorized service personnel only.

- 1** Check voltage to be sure that the voltage indicated on the nameplate corresponds with your voltage.
- 2** Never use warm or hot water to fill the water tank. Use cold water only.
- 3** Keep your hands and the cord away from hot parts of the appliance during operation.
- 4** Never clean with scrubbing powders or harsh cleaners. Simply use a soft cloth dampened with water.
- 5** For optimal taste of your coffee, use purified or bottled water. Periodic descaling is still recommended every 2-3 months.
- 6** Do not use caramelized or flavored coffee beans.

### Instructions for the power supply cord

- A short power-supply cord (or detachable power-supply cord) is to be provided to reduce risks resulting from becoming entangled in or tripping over a longer cord.
- Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.
- If a long detachable power-supply cord or extension cord is used:
  - 1** the marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance.
  - 2** if the appliance is of the grounded type, the extension cord should be a grounding-type 3-wire cord, and
  - 3** the longer cord should be arranged so that it will not drape over the counter top or table top where it can be pulled on by children or tripped over.

## Important safety information

This machine is equipped with safety features. Nevertheless, read and follow the safety instructions carefully and only use the machine as described in these instructions, to avoid accidental injury or damage due to improper use of the machine. Keep this safety booklet for future reference.

## Warning

### General

- Check if the voltage indicated on the machine corresponds to the local mains voltage before you connect the appliance.
- Connect the machine to an earthed wall socket.
- Do not let the power cord hang over the edge of a table or worktop and do not let it touch hot surfaces.
- To avoid the danger of electric shock, never immerse the machine, mains plug or power cord in water or any other liquid.
- Do not pour liquids on the power cord connector.

## 10 English

- To avoid the danger of burns, keep body parts away from hot water jets produced by the machine.
- Do not touch hot surfaces. Use handles and knobs.
- Switch off the machine with the main switch located on the back (if present) and remove the mains plug from the wall socket:
  - if a malfunction occurs.
  - if you are not going to use the appliance for a long time.
  - before you clean the machine.
- Pull at the plug, not at the power cord.
- Do not touch the mains plug with wet hands.
- Do not use the machine if the mains plug, the power cord or the machine itself is damaged
- Do not make any modifications to the machine or its power cord.
- Only have repairs carried out by a service center authorized by Philips to avoid a hazard
- The machine should not be used by children.
- This machine is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the machine by a person responsible for their safety.
- Cleaning and user maintenance shall not be made by children.
- Keep the machine and its cord out of the reach of children.
- Children should be supervised to ensure that they do not play with the machine.
- Never insert fingers or other objects into the coffee grinder.
- Be careful when you dispense hot water. Dispensing may be preceded by small jets of hot water. Wait until the end of the dispensing cycle before you remove the hot water dispensing spout.

## Caution

### General

- This machine is intended for normal household use only. It is not intended for use in environments such as staff kitchens of shops, offices, farms or other work environments.
- Always put the machine on a flat and stable surface. Keep it in upright position, also during transport
- Do not place the machine on a hotplate or directly next to a hot oven, heater or similar source of heat.
- Only put roasted coffee beans in the bean hopper. Putting ground coffee, instant coffee, raw coffee beans or any other substance in the coffee bean hopper may cause damage to the machine.
- Let the machine cool down before you insert or remove any parts. The heating surfaces may retain residual heat after use.
- Never fill the water tank with warm, hot or sparkling water, as this may cause damage to the water tank and the machine.
- Never use scouring pads, abrasive cleaning agents or aggressive liquids such as petrol or acetone to clean the machine. Simply use a soft cloth dampened with water.
- Descale your machine regularly. The machine indicates when descaling is needed. Not doing this will make your machine stop working properly. In this case, repair is not covered by your warranty.
- Do not keep the machine at temperatures below 0°C/32°F. Water left in the heating system may freeze and cause damage.
- Do not leave water in the water tank when you are not going to use the machine for a long period of time. The water can become contaminated. Use fresh water every time you use the machine.

- Never use any accessories or parts from other manufacturers or that Philips does not specifically recommend. If you use such accessories or parts, your guarantee becomes invalid.
- Regular cleaning and maintenance prolongs the lifetime of your machine and ensures optimum quality and taste of your coffee.
- The machine is exposed continuously to moisture, coffee and scale. Therefore it is very important to regularly clean and maintain the machine as described in the user manual and shown on the website. If you do not perform these cleaning and maintenance procedures, your machine eventually may stop working. In this case repair is not covered by warranty.
- Do not clean the brew group in the dishwasher and do not use washing-up liquid or a cleaning agent to clean it. This may cause the brew group to malfunction and may have a negative effect on the coffee taste.
- Do not dry the brew group with a cloth to prevent fibers from collecting inside the brew group.
- Never drink the solution dispensed during the descaling process.
- Only put preground coffee into the preground coffee compartment. Other substances and objects may cause severe damage to the machine. In this case, repair is not covered by your warranty.
- The machine shall not be placed in a cabinet when in use.

## Machines with milk carafe

### Warning

- To avoid the danger of burns, be aware that dispensing may be preceded by jets of milk and steam. Wait until the end of the cycle before you remove the milk carafe.

### Caution

- Make sure that the milk carafe is installed and the milk dispensing spout is open before you select a milk-based coffee beverage or milk froth.
- Do not put any other liquids in the milk jug/carafe than water (for cleaning) or milk.
- Do not clean the milk carafe in the dishwasher.

## Electromagnetic fields (EMF)

This machine complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

## Machine overview (Fig. 1)

1	Control panel	18	Coffee residues drawer
2	Adjustable coffee and milk dispensing spout	19	Coffee grounds container
3	Lid of water tank	20	Drip tray cover
4	Lid of bean hopper	21	Espresso stand tray
5	Lid of pre-ground coffee compartment	22	Espresso stand cover
6	Main switch	23	Hot water dispensing spout
7	Socket for cord	24	Opening for hot water dispensing spout
8	Service door	25	Water tank

## 12 English

9	'Drip tray full' indicator	26	AquaClean filter
10	Drip tray	27	Milk container
11	Drip tray release button	28	Milk dispensing unit
12	Cord	29	Lid of milk dispensing unit
13	Grind setting knob	30	Milk dispensing spout
14	Bean hopper	31	Grease tube
15	Brew group/d	32	Cleaning brush
16	Inside of service door with contact information	33	Multifunctional tool (measuring scoop, grinder adjustment key and coffee duct cleaning tool)
17	Coffee exit duct	34	Water hardness test strip

## Introduction

Congratulations on your purchase of a Philips full-automatic coffee machine! To fully benefit from the support that Philips offers, please register your product at [www.philips.com/coffee-care](http://www.philips.com/coffee-care).

Read the instruction carefully before you use the machine for the first time and save it for future reference.

To help you get the best out of your coffee machine, Philips offers full support in 3 different ways:

- 1 The separate quick start guide for first installation and first use.
- 2 This user manual for more detailed information.
- 3 Online support and movies: scan the QR code on the front page or visit [www.philips.com/coffee-care](http://www.philips.com/coffee-care)

Note: This machine has been tested with coffee. Although it has been carefully cleaned, there may be some coffee residues left. We guarantee, however, that the machine is absolutely new.

## First installation

To prepare your coffee machine for use, you need to perform a few simple steps such as filling the water circuit and activating the AquaClean filter. These steps are shown in the separate quick start guide.

For the best-tasting coffee, you need to brew 5 coffees initially to allow the machine to complete its self-adjustment.

The machine has been set up to get the best taste out of your coffee beans. Therefore we advise you not to adjust the grinder settings until you have brewed 100-150 cups (approx. 1 month of usage).

The machine is provided with the espresso stand, with the double function of cup support and extra drip tray to collect rinsing water.

## AquaClean filter

The AquaClean filter is designed to reduce limescale deposits in your coffee machine and provide filtered water to preserve the aroma and flavor of each cup of coffee. If you use a series of 8 AquaClean filters as indicated by the machine and in this user manual, you don't have to descale your

machine for up to 5000 cups. With each filter you can enjoy up to 625 cups, depending on the selected coffee varieties and the rinsing and cleaning frequencies.

## Preparing the AquaClean filter for activation

Before you place the AquaClean filter in the water tank, you need to prepare it for use:

- 1 Shake the filter for about 5 seconds (Fig. 2).
- 2 Immerse the filter upside down in a jug with cold water for at least 30 seconds and wait until no more air bubbles come out (Fig. 3).
- 3 Push the filter onto the filter connection to the lowest possible point (Fig. 4).

## Activating the AquaClean filter

You need to activate every new AquaClean filter that you use. By activating the AquaClean filter, the machine monitors the capacity of the AquaClean filter and the number of filters used. There are 3 ways to activate the AquaClean filter.

### 1. Activating the AquaClean filter during first installation

After switching on for the first time, the machine guides you through the first installation steps such as filling the water tank, filling the water circuit and activating the AquaClean filter. Simply follow the instructions on the screen.

### 2. Activating the AquaClean filter when prompted

Note: Replace the AquaClean filter as soon as the capacity has dropped to 0% and the filter icon flashes quickly. Replace the AquaClean filter at least every 3 months, even if the machine has not yet indicated that replacement is required.

Tip: We advise you to buy a new filter when the capacity has dropped to 10% and the filter icon starts flashing slowly. This ensures that you can replace the filter when the capacity has dropped to 0%.

- 1 Press the MENU button, scroll to AQUACLEAN FILTER and press the OK button to confirm.
  - The display asks if you want to activate a new filter (Fig. 5).
- 2 Press the OK button to confirm.
  - The display automatically updates the number of filters used (Fig. 6).

Note: If you want to replace the AquaClean filter after 8 filters have been used, you first need to descale the machine. Follow the instructions on the display.

### 3. Activating the AquaClean filter at any other time

You can start using the AquaClean filter at any time by following the instructions below.

- 1 Press the MENU button, select MENU and press the OK button to confirm. Scroll to AQUACLEAN FILTER. Press the OK button (✓) to confirm.
  - The display shows the numbers of AquaClean filters that have been installed previously from 0 to 8 filters (Fig. 6).
- 2 Select ON on the display and press the OK button (✓) to confirm (Fig. 7).
  - The display automatically updates the number of filters used (Fig. 8).
  - Then the 'machine ready' screen appears with the AquaClean 100% icon to indicate that the filter has been installed (Fig. 9).
- 3 Dispense 2 cups of hot water (0.5 l) to complete the activation. Discard this water.

Note: In some situations the machine will tell you that you need to descale the machine before you can install and activate a new AquaClean filter. This is because your machine has to be completely limescale-free before you start to use the AquaClean filter. Follow the instructions on the screen.

## Measuring water hardness

Use the water hardness test strip supplied to set the water hardness. Press the MENU button, select MENU and scroll to select WATER HARDNESS.


- 1 Immerse the water hardness test strip in tap water for 1 second. Then wait for 1 minute.
- 2 Check how many squares have turned red.
- 3 Select the appropriate water hardness setting and press the OK button to confirm.

Number of red squares:	■□□□	■□□■	■□■□	■□■□
Value to be set	1	2	3	4

## Using the control panel

Below you find an overview and description of the control panel of the machine. Some of the buttons have a double function; if applicable the navigation icons appear on the display. Use the buttons next to this icon to select or confirm your choices.

Use the MENU button to select other drinks and to change settings such as the water hardness and coffee temperature.

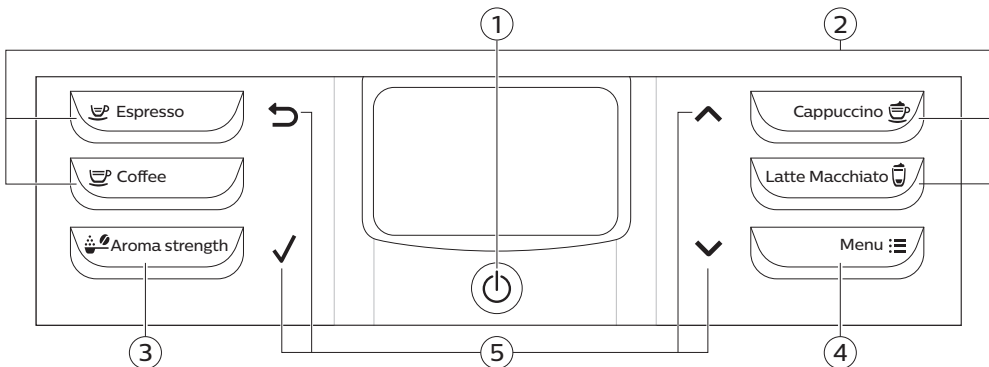

1. On/off button

4. MENU button

2. One-touch drink buttons

5. Navigation icons (up, down, back, ok)

3. AROMA STRENGTH button

## Brewing drinks

You can select a drink by pressing one of the one-touch drink buttons or by selecting another drink in the menu.

- If you want to brew two cups, press the one-touch drink button of the selected drink twice (Fig. 10) or select a coffee drink via the MENU and press it twice. The machine automatically carries out two grinding cycles in sequence for the selected drink. You can only brew two coffee drinks at the same time.
- Slide the dispensing spout up or down to adjust its height to the size of the cup or glass you are using (Fig. 11).

## Brewing coffee drinks

### Brewing coffee with beans

- 1 Fill the water tank with tap water and fill the bean hopper with beans.
- 2 To brew a coffee, press one of the one-touch drink buttons. To select another type of coffee, press the MENU button, select DRINKS, scroll down to the desired drink and press the OK button.
- 3 To stop dispensing coffee, press the OK button.

### Brewing milk-based drinks

- 1 Fill the water tank with tap water and fill the bean hopper with beans.
- 2 Remove the lid of the milk container and fill the milk container with milk (Fig. 12).

Always use milk coming directly from the fridge for optimal results.

- 3 Place the lid back onto the milk container.
- 4 If attached, remove the hot water spout from the machine (Fig. 13).
- 5 Slightly tilt the milk carafe and attach it to the machine (Fig. 14).
- 6 Open the milk dispensing spout (Fig. 15) and place a cup on the drip tray.
- 7 To brew a milk-based drink, press one of the one-touch drink buttons. To select another type of milk-based drink, press the MENU button, select DRINKS, scroll down to the desired drink and press the OK button.
- 8 After brewing milk-based coffee beverages, the display asks you if you want to perform the quick clean procedure for the milk carafe. You have 10 seconds to activate the quick clean procedure. You can perform the quick clean procedure while leaving the milk inside the milk carafe. It is recommended to perform the quick clean procedure at least once a day. Press the OK button to confirm that you want to perform the quick clean procedure or press the escape button to perform the quick clean procedure later.

### Brewing coffee with pre-ground coffee

- 1 Open the lid and pour one measuring scoop of pre-ground coffee into the pre-ground coffee compartment. Then close the lid (Fig. 16).
- 2 Place a cup under the coffee dispensing spout. For smaller cups you can use the espresso stand.
- 3 Press the AROMA STRENGTH button and select the pre-ground coffee brewing function. Press the ESPRESSO button.

Note: With pre-ground coffee you can only brew one coffee at a time.

### Dispensing hot water

- 1 If it is not attached, attach the hot water spout to the machine (Fig. 17).
- 2 Press the MENU button. Select DRINKS, confirm and scroll to select HOT WATER.
- 3 Press the OK button to confirm. The display reminds you to install the hot water dispensing spout; press the OK button to confirm. The machine starts dispensing hot water.
- 4 To stop dispensing hot water, press the OK button.

## Personalizing drinks

### Adjusting coffee and milk volume

You can adjust the volume of the drink brewed according to your taste and to the size of the cups. We advise you to use glass cups or cups with a ceramic-coated rim.

- 1 To adjust the espresso volume, press and hold the ESPRESSO button until the display shows the MEMO icon (Fig. 18).
  - The machine enters the programming phase and starts to brew the selected drink.
- 2 Press the OK button when the cup contains the desired amount of espresso.
  - The tick on the display shows that the button is programmed: every time it is pressed, the machine brews the set espresso volume.

Note: To set the volume of coffee, cappuccino and latte macchiato, follow the same procedure: press and hold the button of the beverage and press the OK button when the cup contains the desired amount. To adjust the volume of other drinks: select your drink, press and hold the OK button until the display shows the MEMO icon and then press the OK button again to save the desired volume. To adjust the volume of milk-based coffee beverages, first insert the milk carafe and save the milk volume and then save the coffee volume.

### Adjusting coffee strength

- To change the coffee strength, press the AROMA STRENGTH button.
- Each time you press the AROMA STRENGTH button, the machine selects a higher aroma strength setting. There are 5 strengths, 1 is very mild and 5 is very strong. After setting 5, setting 1 is selected again (Fig. 19).
- Note: You can also use the AROMA STRENGTH button to brew coffee with pre-ground coffee
- The display shows the chosen strength. After adjusting the coffee strength, the display shows the main menu again and saves the chosen aroma strength when you brew a coffee.

### Adjusting grinder settings

You can adjust the grinder settings with the grinder adjustment key integrated into the handle of the multifunctional tool. At each setting selected, the ceramic coffee grinder guarantees a perfectly even grind for every cup of coffee you brew. It preserves the full coffee aroma and delivers the perfect taste to every cup.

- 1 Open the lid of the bean hopper.
- 2 Place the grinder adjustment key on the grinder adjustment knob (1). Push and turn to the left or to the right (2) one notch at a time (Fig. 20).
  - There are 5 different grinder settings you can choose from. The smaller the dot the stronger the coffee.

**Caution: Do not turn the grinder adjustment knob more than one notch at a time to prevent damage to the grinder.**

Note: The difference becomes noticeable after you have brewed 2-3 cups of coffee at the new setting.



## Handling the brew group

Go to [www.philips.com/coffee-care](http://www.philips.com/coffee-care) for detailed video instructions on how to remove, insert and clean the brew group.

### Removing the brew group from the machine

- 1 Switch off the machine by pressing the main switch on the back of the machine.
- 2 Remove the drip tray with the coffee grounds container.
- 3 Open the service door (Fig. 21).
- 4 Press the PUSH button (Fig. 22) and pull at the grip of the brew group to remove it from the machine (Fig. 23).
- 5 Remove the coffee residues drawer (Fig. 24).

### Reinserting the brew group

Before you slide the brew group back into the machine, make sure it is in the correct position.

- 1 Check if the arrow on the yellow cylinder on the side of the brew group is aligned with the black arrow and N.
  - If they are not aligned, push down the lever until it is in contact with the base of the brew group (Fig. 26).
- 2 Make sure that the yellow locking hook on the other side of the brew group is in the correct position.
  - To position the hook correctly, push it upwards until it is in uppermost position (Fig. 28).
- 3 Place back the coffee residues drawer.
- 4 Slide the brew group back into the machine along the guiding rails on the sides until it locks into position with a click. Do not press the PUSH button.
- 5 Place back the drip tray with the coffee grounds container.

## Cleaning and maintenance

Regular cleaning and maintenance keeps your machine in top condition and ensures good-tasting coffee for a long time, a steady coffee flow and a perfect milk froth.

Consult the table on when and how to clean all detachable parts of the machine. You can find more detailed information and video instructions on [www.philips.com/coffee-care](http://www.philips.com/coffee-care).

### Cleaning table

Part description	When to clean	How to clean
Brew group	Weekly	Remove the brew group and rinse it under the tap (see 'Cleaning the brew group under the tap').
	Monthly	Clean the brew group with the Philips coffee oil remover tablet (see 'Cleaning the brew group with the coffee oil remover tablets'). Go to <a href="http://www.philips.com/coffee-care">www.philips.com/coffee-care</a> for detailed video instructions.

## 18 English

Part description	When to clean	How to clean
Lubrication of the brew group	Depending on the type of usage. Consult the lubrication table (see 'Lubricating the brew group').	Lubricate the brew group with the Philips grease. Go to <a href="http://www.philips.com/coffee-care">www.philips.com/coffee-care</a> for detailed video instructions.
Milk carafe	After every day of use	Perform the QUICK CARAFE CLEAN as indicated on the machine after preparing a milk-based drink.
	Daily	Clean the milk carafe thoroughly (see 'Thorough cleaning of the milk carafe').
	Weekly	Disassemble the milk carafe and clean all parts under the tap (see 'Weekly cleaning of the milk carafe').
	Monthly	Clean the milk carafe with the Philips milk circuit cleaner (see 'Monthly cleaning of the milk carafe').
Drip tray	Empty the drip tray as soon as the red 'drip tray full' indicator pops up through the drip tray. Clean the drip tray when it suits you.	Remove the drip tray and rinse it under the tap with some washing-up liquid.
Coffee grounds container	Empty the coffee grounds container when prompted by the machine. Clean it when it suits you.	Remove the coffee grounds container while the machine is switched on and rinse it under the tap with some washing-up liquid.
Water tank	When it suits you.	Rinse the water tank under the tap
Coffee funnel	Check the coffee funnel weekly to see if it is clogged.	Unplug the machine and remove the brew group. Open the lid of the pre-ground coffee compartment and insert the spoon handle into the coffee funnel. Move the handle up and down until the clogged ground coffee falls down (Fig. 29). Go to <a href="http://www.philips.com/coffee-care">www.philips.com/coffee-care</a> for detailed video instructions.
Espresso stand	Daily	Empty the espresso stand and clean it under the tap or in the dishwasher.

Tip: There is a cleaning calendar on the last page of this user manual. Write down the dates on which you have performed a cleaning action.

## Cleaning the brew group

Regular cleaning of the brew group prevents coffee residues from clogging up the internal circuits. Visit [www.philips.com/coffee-care](http://www.philips.com/coffee-care) for support videos on how to remove, insert and clean the brew group.

### Cleaning the brew group under the tap

- 1 Remove the brew group and the coffee residues drawer.

- 2 Rinse the coffee residues drawer and the brew group thoroughly with water. Carefully clean the upper filter (Fig. 27) of the brew group.
- 3 Let the brew group air-dry before you place it back. Do not dry the brew group with a cloth to prevent fibers from collecting inside the brew group.

### Cleaning the brew group with the coffee oil remover tablets

Only use Phillips Saeco coffee oil remover tablets. Follow the instructions given in the user manual that comes with the coffee oil remover tablets.

## Lubricating the brew group

Lubricate the brew group regularly to ensure that the moving parts continue to move smoothly. See the table below for the lubrication frequency. Visit [www.philips.com/coffee-care](http://www.philips.com/coffee-care) for detailed video instructions.

Usage frequency	Nr of drinks brewed daily	Lubrication frequency
Low	1-5	Every 4 months
Normal	6-10	Every 2 months
Heavy	>10	Every month

## Cleaning the milk carafe

### Carafe quick clean

You can select the QUICK CLEAN function via the menu as described in the steps below:

- 1 Press the MENU button and select QUICK CLEAN, press the OK button to confirm.
- 2 Make sure that the milk carafe is installed and the milk froth dispensing spout is open.
- 3 Place the container under the milk froth dispensing spout.

Note: Make sure the milk dispensing spout is pulled out.

- 4 Press the OK button to start dispensing hot water.

### Thorough cleaning of the milk carafe


To clean the milk carafe thoroughly, you have to do the following regularly:

- 1 Remove the lid of the milk dispensing unit.
- 2 Lift the milk dispensing spout out of the milk dispensing unit and remove the milk tube from the milk dispensing spout (Fig. 31).
- 3 Remove the milk tube from the milk dispensing spout.
- 4 Rinse the milk tube and milk dispensing spout with lukewarm water thoroughly.

### Weekly cleaning of the milk carafe

The milk dispensing spout consists of 5 components. Disassemble all components once a week and clean them under the tap. You can also clean all components, except for the milk container, in the dishwasher.

## 20 English

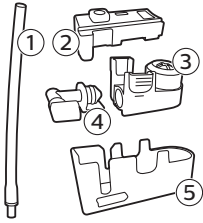

- 1 Milk tube
- 2 Rubber support
- 3 Milk frother
- 4 Milk frother connector
- 5 Housing of milk dispensing spout

### Disassembling the milk dispensing spout

- 1 Press the release buttons on both sides of the top of the milk dispensing unit (1) and lift the top off the milk container (2) (Fig. 32).
- 2 Turn the milk dispensing unit upside down and hold it firmly in your hand. Pull the milk tube off the support (Fig. 33).
- 3 Press the release buttons on the milk frother and remove the milk frother from the the rubber support (Fig. 34).
- 4 Pull the milk frother connector out of the milk frother (Fig. 35).
- 5 Rinse all components under a lukewarm tap.

### Reassembling the milk carafe

- 1 To reassemble the milk dispensing spout, follow steps 2 to 4 of 'Disassembling the milk dispensing spout' in reverse order.
- 2 Place the milk dispensing spout back into the top of the milk carafe.
- 3 Place the top of the milk carafe back onto the milk carafe.

Note: Before you place the milk dispensing spout back into the top of the milk carafe, move the pin inside the top to the correct position. If this pin is not in the correct position, you cannot place the milk dispensing spout back into the top of the milk carafe (Fig. 36).

### Monthly cleaning of the milk carafe

Only use Philips milk circuit cleaner for this cleaning cycle.

- 1 Pour the contents of the milk circuit cleaner sachet in the milk carafe. Then fill the milk carafe with water up to the MAX indication (Fig. 37).
- 2 Insert the milk carafe into the machine and place a container under the milk dispensing spout.
- 3 Press the MENU button, select DRINKS and scroll to MILK FROTH. Press the OK button to start dispensing the cleaning solution.
- 4 Repeat step 3 until the milk carafe is empty.
- 5 When the carafe is empty, remove the container and the milk carafe from the machine.
- 6 Rinse the milk carafe thoroughly and fill it with fresh water up to the MAX level indication.
- 7 Insert the milk carafe into the machine.
- 8 Place the container under the milk dispensing spout.

- 9 Press the MENU button and select MILK FROTH in the DRINKS menu to start the carafe rinsing cycle.
- 10 Repeat step 9 until the milk carafe is empty.
- 11 Repeat steps 6-10.
- 12 When the machine stops dispensing water, the cleaning cycle is finished.
- 13 Disassemble all the components and rinse them under a lukewarm tap.

## Descaling procedure

When the display shows START CALC CLEAN, you need to descale the machine. If you do not descale the machine when this message appears on the display, the machine will eventually stop working properly. In that case, repairs are not covered by the warranty.

Please use Philips descaler only. Under no circumstances should you use a descaler based on sulfuric acid, hydrochloric acid, sulfamic or acetic acid (vinegar) as this may damage the water circuit in your machine and not dissolve the limescale properly. Not using the Philips descaler will void your warranty. Failure to descale the appliance will also void your warranty. You can buy Philips descaling solution in the online shop at [www.philips.com/coffee-care](http://www.philips.com/coffee-care).

- 1 When the machine asks you to descale it (Fig. 38), press the OK button to start. To start descaling without being prompted by the machine, press the MENU button, scroll to select START CALC CLEAN and press the OK button to confirm.
  - The display reminds you that you have to insert the milk carafe. (Fig. 39) Fill the milk carafe with water up to the MIN level indication. Insert the milk carafe into the machine and open the milk dispensing spout.
  - The display reminds you that you have to open the milk dispensing spout (Fig. 40).
  - The display reminds you that you have to remove the AquaClean filter (Fig. 41).
- 2 Remove the espresso stand from the drip tray.
- 3 Remove the drip tray and the coffee grounds container, empty them and put them back into place.
- 4 Remove the water tank and empty it.
- 5 Place a large container (1.5 l) under the coffee dispensing spout.
- 6 Pour the whole bottle of Philips descaler in the water tank and then fill it with water up to the CALC CLEAN level (Fig. 42). Then place it back into the machine and press the OK button to confirm.
- 7 The first phase of the descaling procedure starts. The descaling procedure lasts approx. 30 minutes and consists of a descaling cycle and a rinsing cycle.
- 8 Let the machine dispense the descaling solution until the display reminds you that the water tank is empty.
- 9 Empty the water tank, rinse it and then refill it with fresh water up to the CALC CLEAN level indication.
- 10 Remove and rinse the milk carafe. Fill it with fresh water up to the MIN level indication and reinsert it into the machine. Then open the milk froth dispensing spout.
- 11 Empty the container and place it back under the coffee dispensing spout. Press OK to confirm.
- 12 The second phase of the descaling cycle, the rinsing phase, starts and lasts 3 minutes. The display shows the rinsing icon and the duration of the phase.
- 13 Wait until the machine stops dispensing water. The descaling procedure is finished when the tick appears on the display.
- 14 Press the OK button to exit the descaling cycle. The machine starts heating up and performs the automatic rinsing cycle.
- 15 Clean the milk carafe after descaling (see 'Weekly cleaning of the milk carafe').
- 16 Clean the brew group after descaling (see 'Cleaning the brew group under the tap').
- 17 Place a new AquaClean filter in the water tank.

Tip: Using the AquaClean filter reduces the need for descaling!

### What to do if the descaling procedure is interrupted

You can exit the descaling procedure by pressing the on/off button on the control panel. If the descaling procedure is interrupted before it is completely finished, do the following:

- 1 Empty and rinse the water tank thoroughly.
- 2 Fill the water tank with fresh water up to the CALC CLEAN level indication and switch the machine back on. The machine will heat up and perform an automatic rinsing cycle.
- 3 Before brewing any drinks, perform a manual rinsing cycle. To perform a manual rinsing cycle, first dispense half a water tank of hot water and then brew 2 cups of pre-ground coffee without adding ground coffee.

Note: If the descaling procedure was not completed, the machine will require another descaling procedure as soon as possible.

## Warning icons and error codes

### Meaning of the warning icons



Fill the water tank with fresh water to the MAX level indication.



The brew group is blocked by coffee powder. Clean the brew group.



The bean hopper is empty. Put new coffee beans in the bean hopper.



Insert the drip tray and close the service door.



The brew group is not in the machine or it is not inserted correctly. Insert the brew group.



If the display shows an error code, check section 'Meaning of the error codes' to see what the code on the display means and what you can do. The machine cannot be used when this icon is on the display.



The coffee grounds container is full. Make sure the machine is switched on. Then remove and empty the coffee grounds container.



There is air in the machine, place a cup under the hot water spout and select Ok to start priming.



The lid of the bean hopper is open. Close the lid of the bean hopper.

## Meaning of error codes

Below you find a list of the error codes showing problems that you can solve yourself. Video instructions are available on [www.philips.com/coffee-care](http://www.philips.com/coffee-care). If another error code appears, please contact the Philips Consumer Care Center in your country. For contact details, see the warranty leaflet.

Error code	Problem	Possible solution
01	The coffee funnel is blocked by ground coffee or a foreign object.	Switch off the machine and unplug it. Remove the brew group. Then open the lid of the pre-ground coffee compartment. Insert the spoon handle and move it up and down to make clogged ground coffee fall down (Fig. 29). If a foreign object is blocking the coffee funnel, remove it. Visit <a href="http://www.philips.com/coffee-care">www.philips.com/coffee-care</a> for detailed video instructions
03	The brew group is dirty or not well-greased.	Switch off the machine with the main switch. Rinse the brew group with fresh water, let it air-dry and then lubricate it (see 'Lubricating the brew group'). Consult chapter 'Cleaning the brew group' or visit <a href="http://www.philips.com/coffee-care">www.philips.com/coffee-care</a> for detailed video instructions. Then switch the machine on again.
04	The brew group is not positioned correctly.	Switch off the machine with the main switch. Remove the brew group and reinsert it. Make sure that the brew group is in the correct position before you insert it. Consult chapter 'Handling the brew group' or visit <a href="http://www.philips.com/coffee-care">www.philips.com/coffee-care</a> for detailed video instructions. Then switch the machine on again.
05	There is air in the water circuit.	Restart the machine by switching it off and on again with the main switch. If this works, dispense 2-3 cups of hot water. Descale the machine if you have not done so for a longer period of time.
	The AquaClean filter was not prepared properly before installation or it is clogged.	Remove the AquaClean filter and try again to brew a coffee. If this works, make sure that the AquaClean filter is prepared properly before you place it back (see 'Preparing the AquaClean filter for activation'). Put the AquaClean filter back into the water tank. If this still does not work, the filter is clogged and needs to be replaced.
14	The machine is overheated.	Switch the machine off and switch it back on again after 30 minutes.

## Ordering accessories

To clean and descale the machine, only use the Philips maintenance products. These products can be purchased from your local retailer, from the authorized service centers or online at [www.shop.philips.com/service](http://www.shop.philips.com/service). To find a full list of spare parts online, enter the model number of your machine. You can find the model number on the inside of the service door.

Maintenance products and type numbers:

- Descaling solution CA6700
- AquaClean filter CA6903
- Brew group grease HD5061
- Coffee oil remover tablets CA6704
- Milk circuit cleaner CA6705

- Maintenance kit CA6707

## Troubleshooting

This chapter summarizes the most common problems you could encounter with the machine. Support videos and a complete list of frequently asked questions are available on [www.philips.com/coffee-care](http://www.philips.com/coffee-care). If you are unable to solve the problem, contact the Consumer Care Center in your country. For contact details, see the warranty leaflet.

Problem	Cause	Solution
The drip tray fills up quickly.	This is normal. The machine uses water to rinse the internal circuit and brew group. Some water flows through the internal system directly into the drip tray.	Empty the drip tray when the 'drip tray full' indicator pops up through the drip tray cover.
		Place the espresso stand under the dispensing spout to collect rinsing water.
The machine is in DEMO mode.	You pressed the standby button for more than 8 seconds.	Switch the machine off and then on again with the main switch on the back of the machine.
The 'coffee grounds container full' icon remains displayed.	You emptied the coffee grounds container while the machine was switched off.	Always empty the coffee grounds container while the machine is switched on. If you empty the coffee grounds container when the machine is switched off, the coffee cycle counter is not reset.
	You placed back the coffee grounds container too early.	Do not place back the coffee grounds container until the screen prompts you to put it back.
I cannot remove the brew group.	The brew group is not in the correct position.	Reset the machine in the following way: place back the drip tray and the coffee grounds container. Then close the service door and switch the machine off and back on again. Try again to remove the brew group.
	You have not removed the coffee grounds container.	Remove the coffee grounds container before you remove the brew group.
I cannot insert the brew group.	The brew group is not in the correct position.	Reset the machine in the following way: place back the drip tray and the coffee grounds container. Leave the brew group out. Close the service door and switch the machine on and off. Then put the brew group in the correct position and reinsert it into in the machine.



<b>Problem</b>	<b>Cause</b>	<b>Solution</b>
	The machine is still in the descaling procedure.	You cannot remove the brew group when the descaling procedure is in progress. First complete the descaling procedure and then remove the brew group.
The coffee is watery.	The grinder is set to a too coarse setting.	Set the grinder to a finer (lower) setting.
	The coffee exit duct is clogged.	Clean the coffee exit duct with the spoon handle. Then switch the machine off and on again.
	The machine is performing its self-adjustment procedure.	Brew a few cups of coffee.
	The brew group is dirty or needs to be lubricated.	Clean and lubricate the brew group.
The coffee is not hot enough.	The cups you use are cold.	Preheat the cups by rinsing them with hot water.
	The temperature is set too low. Check the menu settings.	Set the temperature to 'high' in the menu.
	You added milk.	Whether the milk you add is warm or cold, it always decreases the temperature of the coffee to some extent.
Coffee is leaking from the coffee dispensing spout.	The coffee dispensing spout is clogged.	Clean the coffee dispensing spout and its holes with a pipe cleaner.
	The coffee exit duct is clogged	Clean the coffee exit duct with the handle of the measuring spoon or a spoon handle. Then switch the appliance off and on again.
Coffee does not come out or coffee comes out slowly.	The AquaClean filter was not prepared properly for installation or it is clogged.	Remove the AquaClean filter and try to brew a coffee again. If this works, make sure the AquaClean filter is prepared properly before you place it back. Place back the prepared filter. If this still does not work, the filter is clogged and needs to be replaced.
	The grinder is set to a too fine setting.	Set the grinder to a coarser (higher) setting.
	The brew group is dirty.	Clean the brew group.
	The coffee dispensing spout is dirty.	Clean the coffee dispensing spout and its holes with a needle.

## 26 English

<b>Problem</b>	<b>Cause</b>	<b>Solution</b>
	The machine circuit is blocked by limescale.	Descale the machine.
The milk does not froth.	The milk carafe is dirty or not inserted correctly.	Clean the carafe and make sure that you position and insert it correctly.
	The milk dispensing spout has not been opened fully.	Make sure that the milk dispensing spout is in the correct position.
	The milk carafe is incompletely assembled.	Make sure that all the components (especially the milk tube) have been assembled correctly.
	The type of milk used is not suitable for frothing.	Different types of milk result in different amounts of froth and different froth qualities. We have tested the following milk types which proved to deliver a good milk froth result: semi-skimmed or full-fat cow's milk, soy milk and lactose-free milk.
The coffee is splashing.	The distance between cup and spout is too large.	Place the espresso stand on the drip tray, under the spout.
The milk is splashing.	The milk you use is not cold enough.	Make sure you use cold milk coming directly from the fridge.
The machine seems to be leaking.	The machine uses water to rinse the internal circuit and brew group. Some water flows through the internal system directly into the drip tray.	Empty the drip tray when the 'drip tray full' indicator pops up through the drip tray cover. Place the espresso stand under the dispensing spout to collect rinsing water.
	The drip tray is too full and has overflowed which makes it look like the machine is leaking.	Empty the drip tray when the 'drip tray full' indicator pops up through the drip tray cover. Place the espresso stand under the dispensing spout to collect rinsing water.
	The machine is not placed on a horizontal surface.	Place the machine on a horizontal surface so that the 'drip tray full' indicator works properly.
I cannot activate the AquaClean filter and the machine asks for descaling.	The filter has not been replaced in time after the AquaClean filter icon flashed and the capacity dropped to 0%.	Descale your machine first and then install the AquaClean filter.
	You did not install the AquaClean filter during first installation, but after having brewed approx. 25 coffees (based on 100ml cups). The machine has to be completely limescale-free before you install the AquaClean filter.	First descale the machine and then install a new AquaClean filter. After descaling, the filter counter is reset to 0/8. Always confirm filter activation in the machine menu. Also do this after filter replacement.

Problem	Cause	Solution
The new water filter does not fit.	You are trying to install another filter than the AquaClean filter.	Only the AquaClean filter fits into the machine.
The machine is making a noise.	It is normal that your machine makes noise during use.	If the machine starts to make a different kind of noise, clean the brew group and lubricate it (see 'Lubricating the brew group').

## Recycling

- Do not throw away the product with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment.
- Follow your country's rules for the separate collection of electrical and electronic products. Correct disposal helps prevent negative consequences for the environment and human health.

## Warranty and support

If you need information or support, please visit [www.philips.com/support](http://www.philips.com/support) or read the international warranty leaflet.

## Technical specifications

The manufacturer reserves the right to improve the technical specifications of the product. All the preset quantities are approximate.

Description	Value
Housing material	Thermoplastic
Size (w x h x d)	221 x 340 x 430 mm
Weight	7.6 kg
Power cord length	800 - 1200 mm
Control panel	Front
Cup size	up to 152 mm
Water tank	1.8 litres, removable
Coffee bean hopper capacity	250 g
Coffee grounds drawer capacity	15 pucks
Milk carafe capacity	500 ml
Pump pressure	15 bar
Boiler	stainless steel boiler
Safety devices	thermal fuse
Energy saving mode	< 1 Wh

## 28 English

Nominal voltage - Power rating - Power supply    See data on inside of maintenance door

---

## 內容

重要防護措施	29
重要安全資訊	30
警示	30
警告	31
咖啡機概觀 (圖 1)	32
簡介	32
首次安裝	33
AquaClean 濾水器	33
測試水質硬度	34
使用控制面板	34
沖煮飲品	34
個人化飲品	35
調整研磨設定	36
處理沖煮組件	36
清潔與維護	37
清潔牛奶罐	38
除鈣程序	40
警示圖示與錯誤碼	41
訂購配件	42
疑難排解	42
回收	44
保固與支援	44
技術規格	45

## 重要防護措施

### 重要防護措施

使用電子產品時，必須隨時遵照基本的安全防護措施進行，包括下列項目：

- 1 閱讀所有指示。
- 2 請勿接觸高溫表面，務必使用握把或旋鈕。
- 3 為防止火災、電擊和人身傷害，請勿將電線、插頭或產品浸泡在水或其他液體中。
- 4 兒童使用產品，或在兒童附近使用產品時，務必審慎監督。
- 5 不使用時及清潔前，請從插座拔除插頭。安裝或移除零件之前，以及清潔產品之前，先讓其冷卻。
- 6 若電線或插頭損壞、產品故障之後或有任何損壞時，請勿操作任何產品。將產品送回最近的授權服務中心進行檢查、修理或調整。
- 7 產品製造商不建議的配件使用方式可能會造成火災、電擊或人身傷害。
- 8 請勿在戶外使用。
- 9 請勿讓電線懸掛在餐桌或流理台邊緣，或是接觸高溫表面。
- 10 請勿置於或靠近炙熱氣體或電子鍋，或放在加熱烤箱中。
- 11 務必先插上產品的插頭，再將電線插入牆上插座。若要拔離，請將控制器轉到「關閉」，然後從牆上插座拔下插頭。
- 12 請勿將產品用於其他用途。
- 13 保存使用說明

## 30 繁體中文

### 警告

本電器用品僅供家用。除清潔和使用者維護之外，任何維修都應由授權的服務中心執行。請勿將咖啡機浸泡在水中。為降低火災或電擊風險，請勿拆卸咖啡機。咖啡機內部沒有使用者可維修的零件。維修僅限授權的服務人員進行。

- 1 請檢查電壓，確認標示牌上指示的電壓與您的電壓相符。
- 2 切勿在水箱中注入溫水或熱水。只使用冷水。
- 3 操作期間，您的手部和電線應遠離產品的高溫部分。
- 4 切勿使用去污粉或刺激性清潔劑進行清潔。使用軟布沾水擦拭即可。
- 5 為擁有最佳的咖啡口感，請使用淨化水或瓶裝水。仍建議您每 2-3 個月定期除垢。
- 6 請勿使用焦糖化或加味的咖啡豆。

### 電源線的指示

- 隨附的短電源線（或可拆式電源線）造成纏繞或絆倒的風險比長電線更低。
  - 使用長的可拆式電源線或延長線時請格外小心。
  - 若使用長的可拆式電源線或延長線。
- 1 可拆式電源線或延長線上標示的電氣額定值至少應與產品的電氣額定值相等。
  - 2 如果是接地類型的產品，延長線應為接地型 3 線電線，且
  - 3 長電線不得懸掛在流理台或餐桌邊緣，否則兒童可能會拉扯或絆倒。

## 重要安全資訊

咖啡機備有多種安全功能，但是您仍需仔細閱讀並遵照安全性指示，僅可根據相關指示使用咖啡機，以避免不當使用咖啡機所造成的意外傷害或毀壞。請保留本安全說明書以供日後參考。

## 警示

### 一般

- 在您連接電源之前，請先檢查咖啡機上所標示的電壓是否與您當地的電源系統電壓一致。
- 將咖啡機連接到有接地的電源插座。
- 請勿讓電源線懸掛在餐桌或工作台邊緣，並確定不會接觸高溫表面。
- 為避免有觸電的危險，請勿將咖啡機、插頭或電源線浸入水或任何其他液體中。
- 請勿讓液體淋濕電源線接頭。
- 為避免有燙傷的危險，身體各部位應遠離咖啡機噴出的熱水。
- 請勿接觸高溫表面，務必使用握把和旋鈕。
- 使用咖啡機背後的主開關 (如果有的話)，關閉咖啡機電源，並將電源插頭從牆上插座拔除：
  - 若發生故障。
  - 若長時間不使用本產品。
  - 清潔咖啡機之前。
- 請拔插頭，切勿拉扯電源線。
- 接觸插頭時，請確保雙手乾燥。
- 當插頭、電源線或機器本身受損時，請停止使用。
- 請勿擅自改裝咖啡機或電源線。
- 務必讓飛利浦授權的維修中心進行維修作業，以免發生危險。
- 兒童不得使用咖啡機。
- 本咖啡機不適合供下列人士 (包括兒童) 使用：身體官能或心智能力退化者，或是經驗與使用知識缺乏者。他們需要有負責其安全的人員在旁監督，或指示產品的使用方法，方可使用。
- 請勿讓兒童進行清潔和使用者維護。

- 請勿讓孩童接觸咖啡機與電線。
- 請看管孩童，避免他們將咖啡機當成玩具。
- 請勿將手指或其他物品插入咖啡研磨機。
- 取用熱水時請小心。咖啡流出之前可能會先稍微噴出熱水。取下熱水流出口前，請靜待出水循環結束。

## 警告

### 一般

- 本咖啡機僅供一般家用，並非用於商店的員工廚房、辦公室、農舍或其他工作場所。
- 務必將產品置於穩固的平面上。搬運時也請保持直立狀態。
- 請勿將咖啡機放在加熱盤上，或直接放在高溫烤箱、加熱器或類似熱源旁邊。
- 豆槽只能放入烘焙的咖啡豆。豆槽中放入咖啡粉、即溶咖啡、未烘焙的咖啡豆或其他任何物質可能會造成機器損壞。
- 裝入或拆除任何零件前，請務必先讓咖啡機冷卻。加熱面在使用後可能有餘熱。
- 請勿在水箱中裝入溫水、熱水或氣泡礦泉水，否則可能會損害水箱和咖啡機。
- 絕對不可使用鋼絲絨、磨蝕性的清潔劑或侵蝕性的液體 (例如汽油或丙酮) 清潔咖啡機。使用軟布沾水擦拭即可。
- 定期為咖啡機除垢。咖啡機會提示除垢的時間。不定期除垢，咖啡機可能出故障。此類故障不屬於保修範圍。
- 請勿將咖啡機放在低於 0° C/32° F 的地方。加熱系統內殘留的水可能會凍結並造成損壞。
- 若長時間不使用咖啡機，則請勿將水留在水箱內。水可能有汙染，每次使用咖啡機時均請使用乾淨的水。
- 請勿使用其他製造商的任何配件或零件，或非飛利浦建議之配件或零件。如果您使用上述的配件或零件，產品保固將失效。
- 定期清潔及維護可延長咖啡機的壽命，並可確保最佳咖啡品質與口感。
- 由於咖啡機持續接觸到水氣、咖啡和水垢，因此依網站上使用手冊的說明來定期清潔及維護咖啡機是十分重要的。若未執行這些清潔及維護程序，咖啡機最終可能會停止運作。若是這樣，保固將不涵蓋此種維修。
- 請勿將沖煮組件放入洗碗機清洗，同時也請勿使用洗碗精或清潔劑來清潔。這可能會造成沖煮組件故障，並影響咖啡的口感。
- 請勿用布擦乾沖煮組件，以避免沖煮組件內累積纖維。
- 在除垢程序期間，請勿飲用流出的溶液。
- 預磨咖啡粉槽只能放入預磨咖啡粉。其他物質和物品可能會嚴重損壞咖啡機。若是這樣，保固將不涵蓋此種維修。
- 正在使用機器時，請勿將機器放置於櫥櫃內。

## 奶瓶的咖啡机

### 警示

- 為避免有燙傷的危險，請注意咖啡流出之前可能會先噴出牛奶和蒸氣。取出牛奶罐前，請靜待循環結束。

### 警告

- 選擇奶類咖啡飲品或奶泡前，請確認已安裝牛奶罐，且牛奶流出口為開啟狀態。
- 除了用於清潔的水或牛奶外，請勿在牛奶壺/罐中放入其他任何液體。
- 請勿將牛奶罐放入洗碗機清洗。

## 32 繁體中文

# 電磁波 (EMF)

本咖啡機符合所有電磁波暴露的相關適用標準和法規。

## 咖啡機概觀 (圖 1)

1	控制面板	18	咖啡豆渣槽
2	可調式咖啡與牛奶飲品出口	19	咖啡粉槽
3	水箱蓋	20	滴盤蓋
4	豆槽蓋	21	義式濃縮咖啡底座盤
5	預磨咖啡粉槽蓋	22	義式濃縮咖啡底座蓋
6	主開關	23	熱水流出口
7	電線插座	24	熱水流出口開口
8	維修門蓋	25	水箱
9	「水盤已滿」指示燈	26	AquaClean 濾水器
10	滴盤	27	奶泡罐
11	滴盤釋放鈕	28	牛奶流出單元
12	電線	29	牛奶流出單元蓋
13	研磨設定旋鈕	30	牛奶流出口
14	豆槽	31	潤滑劑管
15	沖煮組件d	32	清潔刷
16	維修門內側標有聯絡資訊	33	多功能工具 (量匙、研磨器調整鑰匙和咖啡輸送管清潔工具)
17	咖啡出口輸送管	34	水質硬度試紙

## 簡介

感謝您購買 Philips 全自動咖啡機！為充分享受飛利浦為您提供的好處，請至下列位址註冊產品：[www.philips.com/coffee-care](http://www.philips.com/coffee-care)。

首次使用咖啡機前，請先仔細閱讀指示，並保留說明以供日後參考。

為協助您充分發揮咖啡機的功能，Philips 以三種方式提供完整的支援：

- 1 另外的快速入門指南適用於第一次安裝與使用。
- 2 本使用手冊提供更詳細的資訊。
- 3 顯上支援和影片：掃描封面上的 QR 碼或造訪 [www.philips.com/coffee-care](http://www.philips.com/coffee-care)

注意：本機器經過咖啡沖泡測試。雖然機器經過仔細清潔，機器內可能留有咖啡殘渣。但是我們保證此咖啡機為全新機器。



## 首次安裝

為準備使用您的咖啡機，您需要進行幾個簡單的步驟，例如注水到水流管路和啟動 AquaClean 濾水器。這些步驟如個別的快速入門指南所述。

為萃取出最佳風味的咖啡，您一開始需要沖煮 5 分鐘，讓咖啡機完成自行調整。

咖啡機已設定為從咖啡豆中萃取出最佳風味。因此我們建議您不要調整研磨設定，直到您已沖煮 100-150 杯（約 1 月使用量）為止。

咖啡機隨附的義式濃縮咖啡底座具有雙重功能，除了可放置杯子，也是額外的滴盤，用於收集清洗後的水。

## AquaClean 濾水器

AquaClean 濾水器的設計是用來減少咖啡機中的水垢沈積物，並提供過濾水，以完整保留每一杯咖啡的香氣與美味。若您依照咖啡機和本使用手冊使用一系列 8 個 AquaClean 濾水器，就無須每沖泡 5,000 杯咖啡後為咖啡機除鈣。視選擇的咖啡種類和沖洗及清潔頻率而定，每個濾水器最多可讓您享用 625 杯咖啡。

### 準備 AquaClean 濾水器，以便啟動

將 AquaClean 濾水器放入水箱中前，您需要準備好濾水器：

- 1 甩動濾水器約 5 秒 (圖 2)。
- 2 將 AquaClean 濾水器上下顛倒浸泡在裝有冷水的容器中，直到氣泡不再冒出來 (圖 3)為止。
- 3 將濾水器裝上濾水器接口可能的最低點 (圖 4)。

### 啟動 AquaClean 濾水器

您需要啟動每個使用的全新 AquaClean 濾水器。啟動 AquaClean 濾水器後，咖啡機即可監控 AquaClean 濾水器的容量和濾水器的使用次數。AquaClean 濾水器的啟動方式共有三種。

#### 1. 首次安裝時啟動 AquaClean 過濾器

首次開機後，咖啡機會引導您進行首次安裝步驟，例如加水至水箱內、注水到水流管路及啟動 AquaClean 過濾器。請依照螢幕上的指示進行即可。

#### 2. 出現提示時啟動 AquaClean 濾水器

注意：一旦容量下降至 0% 且濾水器圖示快速閃爍，請立即更換 AquaClean 濾水器。至少每 3 個月更換 AquaClean 濾水器，即便咖啡機尚未指示需要更換濾水器。

提示：當容量下降至 10% 且濾水器圖示開始緩慢閃爍時，建議您購買新的濾水器。這可確保在容量下降至 0% 時，您可以更換濾水器。

- 1 按下 MENU 按鈕，選擇 AQUACLEAN FILTER (AquaClean 濾水器)，然後按下 OK 按鈕確認。
  - 顯示螢幕詢問您是否想啟動新的濾水器 (圖 5)。
- 2 按下 OK 按鈕來確認。
  - 顯示幕會自動更新已使用的濾水器 (圖 6)數量。

注意：如果您想要在已使用 8 個濾水器後更換 AquaClean 濾水器，您必須先為咖啡機除垢。請依照顯示幕上的指示進行。

#### 3. 在任何其他時間啟動 AquaClean 濾水器

您可以開始依照下列說明隨時使用 AquaClean 濾水器。

- 1 按下 MENU 按鈕，選擇 MENU (功能表)，再按下 OK 按鈕確認。捲動以選擇 AQUACLEAN FILTER (AquaClean 濾水器)。按下 OK 按鈕 (✓) 來確認。
  - 顯示螢幕顯示先前安裝的 AquaClean 濾水器，數量可能是 0 到 8 個濾水器 (圖 6)。
- 2 選擇顯示幕上的 ON (開啟)，然後按下 OK 按鈕 (✓) 確認 (圖 7)。
  - 顯示幕會自動更新已使用 (圖 8)的濾水器數量。

## 34 繁體中文

- 接著會出現「咖啡機就緒」畫面，並出現 AquaClean 100% 圖示，表示濾水器已完成安裝 (圖 9)。
- 3 讓熱水流出 2 杯 (0.5 公升) 的量以完成啟動。請將這些水倒掉。

注意：在部分情況下，咖啡機將會指示您在安裝和啟動全新的 AquaClean 濾水器之前，先為咖啡機除垢。這是因為在開始使用 AquaClean 濾水器前，咖啡機必須完全沒有水垢。請依照螢幕上的指示進行。

## 測試水質硬度

使用隨附的水質硬度試紙，來設定水質硬度。按下 MENU 按鈕，選擇 MENU (功能表)，然後捲動以選擇 WATER HARDNESS。


- 1 將水質硬度試紙在自來水中浸泡 1 秒。然後等待 1 分鐘。
- 2 檢查有幾個方塊變成紅色。
- 3 選擇合適的水質硬度設定，然後按下 OK 按鈕確認。

紅色方塊數：	■□□□	■□□■	■□□■	■□□■
設定的值	1	2	3	4

## 使用控制面板

以下是咖啡機控制面板的概觀和說明。部分按鈕具有雙重功能；如適用，瀏覽的圖示會在顯示幕上出現。使用此圖示旁的按鈕選擇，或確認您的選擇。

使用 MENU 按鈕選擇其他飲品和變更設定，例如水質硬度和咖啡溫度。

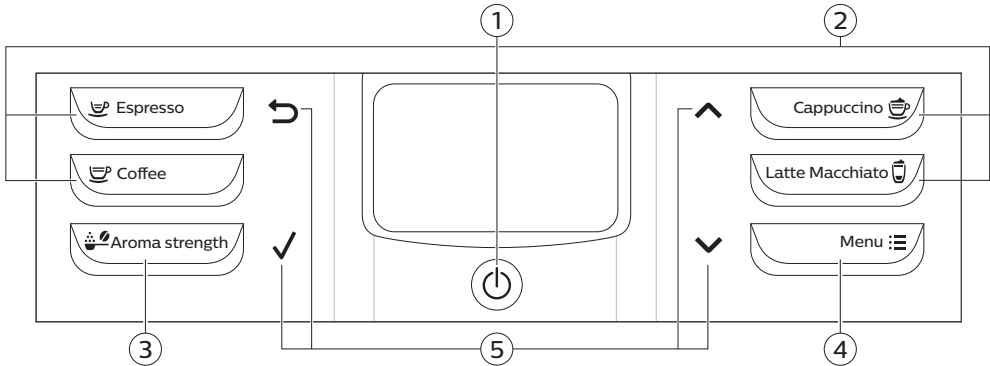

1. 開關按鈕

4. MENU 按鈕

2. 單鍵式飲品按鈕

5. 瀏覽的圖標 (上、下、返回、確定)

3. AROMA STRENGTH 按鈕

## 沖煮飲品

您可以按下其中一個單鍵式飲品按鈕，或選擇功能表中的另一個飲品，來選擇飲品。

- 如果您想要沖煮兩杯，請按兩下 (圖 10) 所選飲品的單鍵式飲品按鈕，或透過 MENU (功能表) 選擇咖啡飲品，然後按兩下。機器便會自動依序執行兩次研磨循環，沖煮所選的飲品。您只能同時沖煮兩杯咖啡飲品。
- 請向上或向下滑動流出口，以將其高度調整至您所使用 (圖 11) 杯子或玻璃杯尺寸適合的位置。

## 沖煮咖啡飲品

### 以咖啡豆沖煮咖啡

- 1 使用自來水注入水箱，然後將咖啡豆放入咖啡豆槽。
- 2 若要沖煮咖啡，請按下其中一個單鍵式飲品按鈕。若要選擇另一種咖啡，按下 MENU 按鈕、選擇 DRINKS (飲品)、向下捲動至想要的飲品，然後按下 OK 按鈕。
- 3 若要停止咖啡流出，請按下 OK 按鈕。

## 沖煮奶類飲品

- 1 使用自來水注入水箱，然後將咖啡豆放入咖啡豆槽。
- 2 取下奶泡罐蓋，然後將牛奶 (圖 12) 倒入奶泡罐。  
請務必直接從冰箱取出牛奶使用，以獲得最佳效果。
- 3 將蓋子裝回奶泡罐。
- 4 如果已裝上，請取下從咖啡機 (圖 13) 取下熱水流出口。
- 5 稍微傾斜牛奶罐，並將其安裝到咖啡機 (圖 14)。
- 6 打開牛奶流出口 (圖 15)，然後將咖啡杯放在水盤上。
- 7 若要沖煮奶類飲品，請按下其中一個單鍵式飲品按鈕。若要選擇另一種奶類飲品，按下 MENU 按鈕、選擇 DRINKS (飲品)、向下捲動至想要的飲品，然後按下 OK 按鈕。
- 8 在沖煮奶類咖啡飲品後，顯示幕會詢問您是否想執行牛奶罐流出口的快速清潔程序。您有 10 秒鐘的時間可啟動快速清潔程序。您可以在牛奶仍在牛奶罐的情形下執行快速清潔程序。建議您每天至少執行一次快速清潔程序。按下 OK 按鈕確認您想執行快速清潔程序，或按下 escape 按鈕，稍後再執行快速清潔程序。

## 以預磨咖啡粉沖煮咖啡

- 1 打開預磨咖啡粉槽蓋，然後倒入一量匙的預磨咖啡粉至預磨咖啡粉槽中。然後關閉預磨咖啡粉槽蓋 (圖 16)。
- 2 將一個咖啡杯放在咖啡流出口下方。若是較小的杯子，您可以使用義式濃縮咖啡底座。
- 3 按下 AROMA STRENGTH 按鈕，選擇預磨咖啡粉沖煮功能。按下 ESPRESSO 按鈕。

注意：若使用預磨咖啡粉，一次只能沖煮一杯咖啡。

## 提供熱水

- 1 如果未裝上，請將熱水流出口裝上咖啡機 (圖 17)。
- 2 按下 MENU 按鈕。選擇 DRINKS (飲品)，確認並捲動以選擇 HOT WATER (熱水)。
- 3 按下 OK 按鈕來確認。顯示幕提醒您安裝熱水流出口，請按 OK 按鈕確認。咖啡機開始流出熱水。
- 4 若要讓熱水停止流出，請按下 OK 按鈕。

## 個人化飲品

### 調整咖啡與牛奶份量

您可以依據您的口味和杯子的大小，調整沖煮的飲品份量。建議您使用玻璃杯或有陶瓷塗層邊緣的杯子。

- 1 如欲調整義式濃縮咖啡的份量，按住 ESPRESSO 按鈕，直到顯示幕顯示 MEMO (記憶) (圖 18) 圖示。
  - 咖啡機進入程序設定階段，開始沖煮所選的飲品。
- 2 當杯子裝滿需要的義式濃縮咖啡量時，按下 OK 按鈕。

## 36 繁體中文

- 顯示幕上的打勾圖示顯示該按鈕已經設定好：每次按下該按鈕，咖啡機將沖煮設定好的義式濃縮咖啡量。

注意：若要設定咖啡、卡布奇諾咖啡和拿鐵瑪奇朵的份量，請遵循同樣的程序：按住該飲品的按鈕，並在杯中已注入想要的咖啡量時按下 OK 按鈕。若要調整其他飲品的份量：選擇飲品，按住 OK 按鈕，直到顯示幕顯示 MEMO (記憶) 圖示，然後再次按下 OK 按鈕以儲存需要的份量。若要調整奶類咖啡飲品的份量，先插入牛奶罐並儲存牛奶量後，再儲存咖啡量。

### 調整咖啡濃度

- 若要變更咖啡份量，按下 AROMA STRENGTH 按鈕。
- 每次按下 AROMA STRENGTH 按鈕時，咖啡機會選擇更強的香氣強度設定。強度共有 5 級：1 是溫和，5 非常濃郁。設定 5 後，請再次 (圖 19) 選擇 1。
- 注意：您也可以使用 AROMA STRENGTH 按鈕，以預磨咖啡粉沖煮咖啡
- 顯示幕會顯示所選擇的濃度。在調整咖啡強度之後，咖啡機在沖煮咖啡時，顯示幕將會回到主選單，並儲存選擇的香氣強度。

### 調整研磨設定

您可以使用多功能工具握把中的研磨器調整鑰匙，調整研磨器設定。根據每次選定的研磨設定，陶瓷咖啡研磨器可確保您沖煮的每杯咖啡都完美地經過均勻的研磨。如此可保留完整的咖啡香氣，並為每杯咖啡帶來完美口感。

- 1 打開豆槽蓋。
  - 2 將研磨器調整鑰匙放在研磨調整旋鈕上 (1)。往下推並往左或往右旋轉 (2)，每次 (圖 20) 轉動一個溝槽。
- 您共有 5 種不同的研磨設定可以選擇。點愈小，咖啡愈濃。

**注意：轉動研磨調整旋鈕時，每次請勿超過一個溝槽，以免研磨器受損。**

注意：使用新設定時，沖煮 2-3 杯咖啡之後，差異會變得更明顯。

### 處理沖煮組件

前往 [www.philips.com/coffee-care](http://www.philips.com/coffee-care)，取得如何拆下、插入和清潔沖煮組件的詳細和影片說明。

#### 從咖啡機中取出沖煮組件

- 1 按下咖啡機背後的主開關，關閉咖啡機。
- 2 連同咖啡粉槽一起移除滴盤。
- 3 打開維修門 (圖 21) 蓋。
- 4 按下「PUSH」(推) 按鈕 (圖 22) 並拉動沖煮組件上的提把，將其從咖啡機 (圖 23) 取下。
- 5 取下咖啡殘渣抽屜 (圖 24)。

#### 重新插入沖煮組件

將沖煮組件推回咖啡機之前，請先確定沖煮組件位於正確的位置。

- 1 檢查沖煮組件側邊黃色濾網筒上的箭頭是否對其黑色箭頭和 N。
  - 如果未對齊，請壓下控制桿，直到控制桿接觸沖煮組件 (圖 26) 的底座。
- 2 請確定沖煮組件另一側的黃色鎖定鉤位於正確的位置。
  - 要將鉤正確定位，請將它往上推到最上方的位置 (圖 28)。
- 3 裝回咖啡殘渣抽屜。

- 4 沿著兩側的導引軌道將沖煮組件推回咖啡機，直到聽見「喀噠」一聲卡入定位為止。請勿按下 PUSH 按鈕。
- 5 請重新裝回滴盤和咖啡粉槽，

## 清潔與維護

定期清潔與維護可讓咖啡機保持在最佳狀態，並確保長期都能享用美味的咖啡、咖啡穩定流入，以及完美的奶泡。

請參閱表格以了解何時及如何清潔咖啡機所有可拆卸的零件。您可以在 [www.philips.com/coffee-care](http://www.philips.com/coffee-care) 找到供更詳細的資訊和影片說明。

## 清潔與保養表

零件說明	何時清潔	如何清潔
沖煮器	每週	拆卸沖煮器，在水龍頭（見 '在水龍頭下清潔沖煮組件'）下沖洗。
	每月	使用飛利浦咖啡去油汙錠（見 '使用咖啡去油汙錠清潔沖煮組件'）清潔沖煮器。前往 <a href="http://www.philips.com/coffee-care">www.philips.com/coffee-care</a> 取得詳細的影片說明。
潤滑沖煮器	依據使用的類型。請查閱潤滑表（見 '潤滑沖煮組件'）。	使用飛利浦潤滑劑潤滑沖煮器。前往 <a href="http://www.philips.com/coffee-care">www.philips.com/coffee-care</a> 取得詳細的影片說明。
牛奶罐	每日使用後	在沖煮過奶類飲品之後，依據咖啡機的指示執行 QUICK CARAFE CLEAN（牛奶罐快速清洗）程序。
	每天	徹底（見 '徹底清潔牛奶罐'）清潔牛奶罐。
	每週	拆解牛奶罐，並在水龍頭（見 '每週清潔牛奶罐'）下沖洗所有零件。
	每月	使用飛利浦牛奶管路清潔劑（見 '每月清潔牛奶罐'）清潔牛奶罐。
水盤	水盤上「水盤已滿」紅色指示燈亮起後，請立即將水盤清空。當您方便時，請清潔水盤。	取出水盤，然後在水龍頭下使用些許清潔劑沖洗。
咖啡粉槽	咖啡機提示時請清空咖啡粉槽。當您方便時，請清潔咖啡粉槽。	請在咖啡機為開機狀態時拆除咖啡粉槽，然後在水龍頭下使用些許清潔劑沖洗。
水箱	當您方便時。	將水箱放在水龍頭下沖洗
咖啡漏斗	請每週查看咖啡漏斗是否阻塞。	請拔下咖啡機插頭，然後取出沖煮器。打開預磨咖啡粉槽蓋，然後將湯匙握把插入咖啡漏斗。上下移動握把，直到堵塞的咖啡粉掉落（圖 29）。前往 <a href="http://www.philips.com/coffee-care">www.philips.com/coffee-care</a> 取得詳細的影片說明。
義式濃縮咖啡底座	每天	清空義式濃縮咖啡底座，並放在水龍頭下或洗碗機中清洗。

提示：本使用手冊的最後一頁提供清潔行事曆。請記下您進行清潔動作的日期。

## 清洗沖煮組件

定期清潔沖煮組件可防止咖啡粉殘渣堵塞內部管路。造訪 [www.philips.com/coffee-care](http://www.philips.com/coffee-care)，以觀看如何取下、插入和清潔沖煮組件的支援影片。

### 在水龍頭下清潔沖煮組件

- 1 取下沖煮組件和咖啡殘渣抽屜。
- 2 用水徹底清潔沖洗咖啡殘渣抽屜和沖煮組件。請仔細清潔沖煮組件的上方濾網 (圖 27)。
- 3 裝回沖煮組件前，請先讓沖煮組件風乾。請勿用布擦乾沖煮組件，以避免沖煮組件內累積纖維。

### 使用咖啡去油汙錠清潔沖煮組件

僅可使用 Phillips Saeco 咖啡去油汙錠。請依照咖啡去油汙錠隨附之使用手冊的指示進行。

## 潤滑沖煮組件

請定期潤滑沖煮組件，確保活動零件能持續平順移動。請參考下表的潤滑頻率。造訪 [www.philips.com/coffee-care](http://www.philips.com/coffee-care) 取得詳細的影片說明。

使用頻率	每日沖煮飲品數量	潤滑頻率
低度	1-5	每 4 個月
一般	6-10	每 2 個月
重度	>10	每月

## 清潔牛奶罐

### 牛奶罐快速清洗

您可以透過選單選擇快速清潔功能，如下步驟所述：

- 1 按下 MENU 按鈕，選擇 QUICK CLEAN (快速清潔)，再按下 OK 按鈕確認。
- 2 確認已裝入牛奶罐，且奶泡流出口為開啟狀態。
- 3 將一個容器放在奶泡流出口下方。

注意：請確認已將牛奶流出口拉出。

- 4 按下 OK 按鈕，讓熱水開始流出。


### 徹底清潔牛奶罐

若要徹底清潔牛奶罐，必須定期執行下列步驟：

- 1 取下牛奶流出單元的蓋子。
- 2 將牛奶流出口從牛奶流出單元向上提起，然後從牛奶流出口 (圖 31)取下牛奶管。
- 3 從牛奶流出口取下牛奶管。
- 4 以溫水徹底沖洗牛奶管與牛奶流出口。

### 每週清潔牛奶罐

牛奶流出口由 5 個組件組成。每週一次拆解所有組件，並在水龍頭下沖洗。除了牛奶罐外，您可以將所有組件放入洗碗機中清洗。

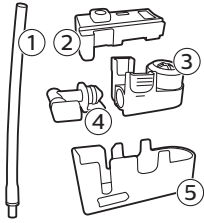

- 1 牛奶管
- 2 橡膠支撐架
- 3 奶泡機
- 4 奶泡機連接器
- 5 牛奶流出口外殼

## 拆解牛奶流出口

- 1 按下牛奶流出單元頂端兩側的釋放按鈕 (1)，掀開牛奶罐的頂部 (2) (圖 32)。
- 2 將牛奶流出單元上下顛倒並拿穩。從支撐架 (圖 33) 中拔出牛奶管。
- 3 按下奶泡機上的釋放按鈕，並從橡膠支撐架 (圖 34) 上移除奶泡機。
- 4 將奶泡機連接器從奶泡機 (圖 35) 拉出。
- 5 在水龍頭下以溫水下沖洗所有組件。

## 重新組裝牛奶罐

- 1 若欲重新組裝牛奶流出口，請依相反順序操作「拆解牛奶流出口」的步驟 2 至 4。
- 2 將牛奶流出口重新放回牛奶罐頂端。
- 3 將牛奶罐頂部零件重新放回牛奶罐。

注意：將牛奶流出口重新放回牛奶罐頂端之前，請將牛奶罐頂部內的插銷移至正確位置。若插銷沒有在正確位置上，便無法將牛奶流出口重新放回牛奶 (圖 36) 罐頂端。

## 每月清潔牛奶罐

此清潔循環只能使用 Philips 牛奶管路清潔劑。

- 1 將牛奶管路清潔劑的內容物倒入牛奶罐中。接著在牛奶罐中注入水至 MAX 刻度 (圖 37)。
- 2 將牛奶罐插入咖啡機中，並在牛奶流出口下方放置一個容器。
- 3 按下 MENU 按鈕，選擇 DRINKS (飲品) 並捲動至 MILK FROTH (奶泡)。按下 OK 按鈕，開始注入清潔溶液。
- 4 重複步驟 3，直到牛奶罐清空。
- 5 當牛奶罐清空時，從咖啡機移除容器與牛奶罐。
- 6 徹底沖洗牛奶罐，然後以清水裝滿至 MAX 水位刻度。
- 7 將牛奶罐插入咖啡機。
- 8 將一個容器放在牛奶流出口下方。
- 9 按下 MENU 按鈕，選擇 DRINKS (飲品) 功能表中的 MILK FROTH (奶泡)，以開始執行牛奶罐沖洗循環。
- 10 重複步驟 9，直到牛奶罐清空。
- 11 重複步驟 6 至 10。
- 12 當咖啡機停止流出水時，表示已完成清潔循環。
- 13 拆解所有組件，並在水龍頭下以溫水沖洗。

## 除鈣程序

當顯示幕顯示 START CALC CLEAN (開始除鈣清洗)，就必須為機器除垢。若顯示幕出現此訊息時，沒有為機器除垢，咖啡機最終可能會無法正常運作。若是這樣，保固將不涵蓋此種維修。

只能使用飛利浦除垢劑。絕不可使用硫酸、鹽酸、氨基磺酸或醋酸 (例如醋) 為基底的除垢劑，因為它們可能損害咖啡機的水流管路，且無法妥善溶解水垢。未使用飛利浦除垢劑會使保固失效。未去除咖啡機水垢也會使保固失效。您可以前往 [www.philips.com/coffee-care](http://www.philips.com/coffee-care) 線上商店購買飛利浦除垢溶液。

- 咖啡機要求您除鈣 (圖 38) 時，請按下 OK 按鈕，開始除鈣。若要在咖啡未提示時開始除鈣，請按下 MENU 按鈕、向下捲動選擇 START CALC CLEAN (開始除鈣清洗)，然後按下 OK 按鈕確認。
  - 顯示幕會提醒您必須插入牛奶罐 (圖 39)。在牛奶罐中注入水至 MIN 水位刻度。將牛奶罐插入咖啡機，打開牛奶流出口。
  - 顯示幕會提醒您必須打開牛奶流出口 (圖 40)。
  - 顯示幕會提醒您必須取下 AquaClean 濾水器 (圖 41)。
- 從水盤取下義式濃縮咖啡底座。
- 取下水盤與咖啡粉槽後，清空之後再裝回原位。
- 取出水箱然後倒空。
- 將一個大容器 (1.5 公升) 放在咖啡流出口下方。
- 將整瓶飛利浦除鈣劑倒入水箱，然後將水箱的水裝滿至 CALC CLEAN 刻度 (圖 42)。然後將水箱推回咖啡機中，按下 OK 按鈕確認。
- 除鈣程序的第一階段開始。除鈣程序會持續約 30 分鐘，其中包含除鈣循環和沖洗循環。
- 讓咖啡機流出除鈣溶液，直到顯示幕提醒您水箱已空。
- 倒空並沖洗水箱，然後用清水將水箱裝滿至 CALC CLEAN 刻度。
- 移除並沖洗牛奶罐。在水箱中裝入清水到 MIN 刻度，然後將水箱重新插入機器上。然後打開奶泡流出口。
- 將容器清空，並將其放回咖啡流出口下方。按下 OK 以確認。
- 除鈣循環的第二個階段和沖洗循環開始並持續 3 分鐘。顯示幕顯示沖洗圖示與此階段的持續時間。
- 等待咖啡機停止流出水。當顯示螢幕上出現打勾圖示，就代表除鈣程序完成。
- 按下 OK 按鈕，退出除鈣程序。咖啡機開始加熱，並執行自動沖洗循環。
- 請在除鈣 (見 '每週清潔牛奶罐') 後清潔牛奶罐。
- 請在除鈣 (見 '在水龍頭下清潔沖煮組件') 後清潔沖煮器。
- 在水箱中放入新的 AquaClean 濾水器。

提示：使用 AquaClean 濾水器可減少除鈣需求！

### 若除鈣程序中斷該怎麼做

您可按下控制面板上的開/關按鈕，結束除鈣程序。如果在完全完成前中斷除鈣程序，執行下列步驟：

- 請倒光水箱內的水後，徹底洗淨水箱。
- 將清水注入水箱至 CALC 刻度後，開啟咖啡機電源。咖啡機將加熱，並執行自動沖洗循環。
- 沖煮任何咖啡飲品前，請執行手動沖洗循環。若要進行手動沖洗循環，請先將水箱注入一半的熱水，然後沖煮 2 杯預磨咖啡粉咖啡，但不要添加咖啡粉。

注意：若除鈣程序尚未完成，需要儘快讓咖啡機執行另一次除鈣程序。



## 警示圖示與錯誤碼

### 警示圖示的意義



將清水注入水箱至 MAX 水位刻度。



沖煮組件被咖啡粉堵塞。清洗沖煮組件。



豆槽已空。在豆槽內放入新的咖啡豆。



插入滴盤 並關上維修門蓋。



沖煮組件不在咖啡機中或未正確插入。插入沖煮組件。



若顯示幕顯示錯誤碼，請參閱「錯誤碼的意義」，了解顯示幕上錯誤碼的意義以及您可以怎麼做。顯示幕出現此圖示時無法使用咖啡機。



代表咖啡粉槽已滿。確定咖啡機的電源已經開啟，然後移除並清空咖啡粉槽。



咖啡機內有空氣時，請將杯子放在熱水出水口下方，然後選擇 OK 開始預備循環。



豆槽蓋為開啟狀態。關閉豆槽蓋。

### 錯誤碼的意義

下列是顯示問題的錯誤碼清單，您可以自行解決這些問題。[www.philips.com/coffee-care](http://www.philips.com/coffee-care) 提供影片說明。如果出現另一個錯誤碼，請聯絡您所在國家/地區的飛利浦客戶服務中心。如需聯絡詳細資料，請參閱保固說明書。

錯誤碼	問題	可能的解決方法
01	咖啡粉或異物堵塞咖啡漏斗。	關閉咖啡機電源，並拔除插頭。拆卸沖煮組件。然後打開預磨咖啡粉槽蓋。插入湯匙握把，然後上下移動湯匙握把，讓堵塞的咖啡粉掉落 (圖 29)。如果異物堵塞咖啡漏斗，請清除異物。造訪 <a href="http://www.philips.com/coffee-care">www.philips.com/coffee-care</a> 取得詳細的影片說明
03	沖煮組件有髒汙或沒有充分潤滑。	使用主開關閉咖啡機。以清水沖洗沖煮組件、使其自然風乾，然後潤滑沖煮組件 (見 '潤滑沖煮組件')。請參閱「清潔沖煮組件」章節或造訪 <a href="http://www.philips.com/coffee-care">www.philips.com/coffee-care</a> 取得詳細的影片說明。然後再開啟咖啡機電源。
04	沖煮組件安裝不正確。	使用主開關閉咖啡機。請取出沖煮組件並重新裝入。插入沖煮組件前，請確定沖煮組件位於正確的位置。請參閱「處理沖煮組件」章節或造訪 <a href="http://www.philips.com/coffee-care">www.philips.com/coffee-care</a> 取得詳細的影片說明。然後再開啟咖啡機電源。

## 42 繁體中文

錯誤碼	問題	可能的解決方法
05	水流管路中有空氣。	使用主開關閉咖啡機電源後再次開啟，藉此重新啟動咖啡機。如果有效，讓熱水流出 2-3 杯的量。若您有很長一段時間沒這樣做，請為咖啡機除垢。
	安裝前未正確準備 AquaClean 濾水器，或 AquaClean 濾水器阻塞。	請拆下 AquaClean 濾水器，然後再試著沖煮咖啡。如果有效，請確定在裝回 (見 '準備 AquaClean 濾水器，以便啟動') AquaClean 濾水器前已正確準備此濾水器。將 AquaClean 濾水器推回水箱中。如果此方法仍無效，表示濾水器已阻塞，需要更換。
14	代表咖啡機已過熱。	關閉咖啡機電源，在 30 分鐘後重新開啟咖啡機電源。

## 訂購配件

如欲清潔與除垢本機器，只能使用 Philips 維護產品。這些產品可以向您當地的零售商、授權的服務中心，或線上在 [www.shop.philips.com/service](http://www.shop.philips.com/service) 購買。若要上網尋找完整的備用零件清單，請輸入咖啡機的型號。您可以在維修門內側找到型號。

保養產品和型號：

- 除垢溶液 CA6700
- AquaClean 濾水器 CA6903
- 沖煮組件潤滑劑 HD5061
- 咖啡去油汙錠 CA6704
- 牛奶管路清潔劑 CA6705
- 保養套件 CA6707

## 疑難排解

本單元概述了使用本機器最常遇到的問題。[www.philips.com/coffee-care](http://www.philips.com/coffee-care) 提供支援影片和完整的常見問題清單。如果您無法解決問題，請聯絡您所在國家/地區的客戶服務中心。如需聯絡詳細資料，請參閱保固說明書。

問題	原因	解決方法
水盤一下就滿了。	這是正常現象。咖啡機會用水清洗內部管路和沖煮器。部分的水會經由內部系統直接流入水盤。	水盤蓋上「水盤已滿」指示燈亮起時，請將水盤清空。  在流出口下方放置義式濃縮咖啡底座，來收集清洗後的水。
咖啡機處於 DEMO (示範) 模式。	您按壓待機按鈕超過 8 秒。	使用咖啡機背後的主開關，關閉咖啡機電源後再重新開啟。
「咖啡粉槽已滿」圖示持續顯示。	您在咖啡機關閉時清空咖啡粉槽。	請一定要在咖啡機電源開啟時清空咖啡粉槽。如果您在咖啡機關閉時清空咖啡粉槽，表示咖啡循環計數器並未重新設定。
	您太快裝回咖啡粉槽。	請在顯示幕提示您將咖啡粉槽裝回咖啡機之後，再將咖啡粉槽裝回去。

問題	原因	解決方法
我無法拆下沖煮器。	沖煮器的位置不正確。	請以如下方式重新設定機器：請重新裝回水盤和咖啡粉槽，然後關閉維修門蓋，關閉咖啡機電源後再開啟。再次試著拆下沖煮器。
	您尚未拆除咖啡粉槽。	請先拆除咖啡粉槽後，再拆除沖煮器。
我無法插入沖煮器。	沖煮器的位置不正確。	請以如下方式重新設定機器：請重新裝回水盤和咖啡粉槽，但不要裝回沖煮器。關閉維修門蓋，開啟咖啡機電源後再關閉。然後將沖煮器放置於正確位置，重新插入咖啡機內。
	咖啡機仍在進行除鈣程序。	除鈣程序進行時，無法拆除沖煮器。請先完成除鈣程序，才能拆除沖煮器。
咖啡太淡。	研磨器設為過粗的顆粒設定。	將研磨器設為較細 (較低) 的設定。
	咖啡出口輸送管堵塞。	使用湯匙握把清潔咖啡出口輸送管。然後關閉咖啡機電源後再開啟。
	咖啡機正在執行自我調整程序。	沖煮幾杯咖啡。
	沖煮器有髒汙，或需要潤滑。	清潔並潤滑沖煮器。
咖啡不夠燙。	您使用的杯子過冷。	先以熱水清洗來預熱杯子。
	溫度設定過低。檢查功能表設定。	在功能表中將溫度設定為「高」。
	您加了牛奶。	無論您加的牛奶是熱還是冷，多少都會降低咖啡的溫度。
咖啡從咖啡流出口漏出。	咖啡流出口堵塞。	以管路清潔劑清潔咖啡流出口及其洞口。
	咖啡出口輸送管堵塞	以量匙或湯匙握把清潔咖啡出口輸送管。然後關閉電源後再開啟即可。
沒有流出咖啡，或咖啡流出的速度太慢。	未正確準備要安裝的 AquaClean 濾水器，或 AquaClean 濾水器阻塞。	請拆下 AquaClean 濾水，然後再試著沖煮咖啡。如果有效，請確定在裝回 AquaClean 濾水器前已正確準備此濾水器。裝回準備好的濾水器。如果此方法仍無效，表示濾水器已阻塞，需要更換。
	研磨器設為過細的顆粒設定。	將研磨器設為較粗 (較高) 的設定。
	沖煮器有髒汙。	清潔沖煮器。
	咖啡流出口有髒汙。	以細針清潔咖啡流出口及其洞口。
	咖啡機管路被水垢阻塞。	為咖啡機除鈣。
	牛奶沒有奶泡。	牛奶罐有髒汙，或插入不正確。
牛奶流出口沒有完全打開。		請確認牛奶流出口位於正確的位置。

## 44 繁體中文

問題	原因	解決方法
	牛奶罐組裝不完全。	請確認所有組件 (特別是奶泡管) 都已正確組裝。
	所用的牛奶種類不適合製作奶泡。	牛奶種類會影響奶泡量和奶泡品質。我們已測試下列的牛奶種類，結果證明這些牛奶都能製作出優質奶泡：半脫脂牛奶或全脂牛奶、豆漿和零乳糖牛奶。
咖啡噴濺。	杯子和流出口之間的距離太遠。	將義式濃縮咖啡底座放在流出口下方的水盤上。
牛奶噴濺。	您使用的牛奶不夠冰。	請確認您使用直接從冰箱拿出的冰牛奶。
咖啡機似乎會漏水。	咖啡機會用水清洗內部管路和沖煮器。部分的水會經由內部系統直接流入水盤。	水盤蓋上「水盤已滿」指示燈亮起時，請將水盤清空。在流出口下方放置義式濃縮咖啡底座，來收集清洗後的水。
	水盤過滿而溢出，讓咖啡機看起來似乎是在漏水。	水盤蓋上「水盤已滿」指示燈亮起時，請將水盤清空。在流出口下方放置義式濃縮咖啡底座，來收集清洗後的水。
	咖啡機未放在水平表面上。	將咖啡機置於水平表面上，以便「水盤已滿」指示燈能夠正常運作。
我無法啟動 AquaClean 濾水器，咖啡機要求進行除鈣程序。	在 AquaClean 濾水器圖示快速閃爍且容量下降至 0% 之後，未及時更換濾水器。	先為咖啡機除鈣，再安裝 AquaClean 濾水器。
	您未在首次安裝時安裝 AquaClean 濾水器，但已沖煮約 25 杯咖啡 (每杯 100 毫升)。在您安裝 AquaClean 濾水器前，咖啡機必須完全沒有水垢。	首先為咖啡機除鈣，接著安裝新的 AquaClean 濾水器。除鈣後，濾水器計數器將重設為 0/8。請一律在咖啡機能表中確認濾水器啟動。當您更換濾芯之後也必須這麼做。
新的濾水器不符。	您嘗試安裝 AquaClean 濾水器之外的濾水器。	只有 AquaClean 濾水器會符合咖啡機需求。
咖啡機發出噪音。	這是正常現象，咖啡機會在使用時發出噪音。	如果咖啡機開始發出不同的噪音，請清潔並潤滑沖煮器 (見「潤滑沖煮組件」)。

## 回收

- 本產品使用壽命結束時請勿與一般家庭廢棄物一併丟棄。請將該產品放置於政府指定的回收站，此舉能為環保盡一份心力。
- 請按照您所在國家/地區的規定，分類與回收電子電器產品。正確處理廢棄物有助避免對環境和人類健康的負面影響。

## 保固與支援

如需資訊或支援，請造訪：[www.philips.com/support](http://www.philips.com/support)，或參閱全球保固說明書。

## 技術規格

製造商保有更新此產品技術規格的權利。所有預設的數量皆為約略值。

說明	值
外殼材質	熱塑性塑膠
尺寸 (寬 x 高 x 深)	221 x 340 x 430 公釐
體重	7.6 公斤
電線長度	800 - 1200 公釐
控制面板	正面
杯子大小	最長 152 公釐
水箱	1.8 公升，可拆除
咖啡豆槽容量	250 公克
咖啡粉抽屜容量	15 包
牛奶罐容量	500 毫升
幫浦水壓	15 巴
鍋爐	不鏽鋼鍋爐
安全裝置	防過熱保險絲
省電模式	< 1 瓦時
額定電壓 - 功率定額 - 電力供應	詳見保養門蓋內的資料

設備名稱：飛利浦全自動義式咖啡機 Equipment name		型號(型式)：EP5360, EP5361, EP5365 Type designation (Type)				
單元 Unit	限用物質及其化學符號 Restricted substances and its chemical symbols					
	鉛 Lead (Pb)	汞 Mercury (Hg)	鎘 Cadmium (Cd)	六價鉻 Hexavalent chromium (Cr <sup>+6</sup> )	多溴聯苯 Polybrominated biphenyls (PBB)	多溴二苯醚 Polybrominated diphenyl ethers (PBDE)
印刷電路板	-	○	○	○	○	○
電源線組	-	○	○	○	○	○
分配電機螺絲	-	○	○	○	○	○
齒輪金屬棒	-	○	○	○	○	○
備考1. Note 1:	“超出0.1 wt %”及“超出0.01 wt %”係指限用物質之百分比含量超出百分比含量基準值。 “Exceeding 0.1 wt %” and “exceeding 0.01 wt %” indicate that the percentage content of the restricted substance exceeds the reference percentage value of presence condition.					
備考2. Note 2:	“○”係指該項限用物質之百分比含量未超出百分比含量基準值。 “○” indicates that the percentage content of the restricted substance does not exceed the percentage of reference value of presence.					
備考3. Note 3:	“-”係指該項限用物質為排除項目。 The “-” indicates that the restricted substance corresponds to the exemption.					







[www.philips.com/coffee-care](http://www.philips.com/coffee-care)



421946046221



>75% recycled paper